

KAWAI CP 150

Programmwechselbefehle

Klang Name	PRG	BNK
12 String	26	8
2 2/3' Percussion	18	91
4' Percussion	18	92
60's EP	5	24
60's Organ	17	16
60's Strings	49	90
6th Hit	56	92
8' Celeste	20	94
8' Diapason	20	95
Ac Bass Str Slap	121	2
Ac Bass& Ride	33	90
Accordion	22	8
Accordion 2	22	91
Acoustic Bass	33	91
Acoustic Bass 2	33	0
Agogo	114	0
Alto Sax	66	0
Analog Brass	63	16
Analog Brass 2	64	16
Analog Voice	55	90
Applause	127	0
Atmosphere	100	0
Attack Bass	40	90
Bag Pipe	110	0
Banjo	106	0
Bariton Sac	68	0
Baroque Mix	20	96
Bass & Lead	88	0
Bass Hit Plus	56	90
Bassoon	71	0
Be 3	17	90
Be More	17	91
Be Nice	17	96
Beautiful Strings	45	90
Big Band Winds	74	91
Bird Tweet	124	0
Bird Tweet 2	124	3
Blown Bottle	77	0
Blues Harmonica	23	91
Bowed	93	0
Brass Section	62	0
Brass Section 2	62	8
Breath Noise	122	0
Breathy Tenor Sax	67	8
Bright Trombone	58	90
Brightness	101	0
Bubble	123	5
BurstNoise	126	9
Caliope	83	0
CarCrash	126	4
CarEngine	126	1
Carillon	15	9
CarPass	126	3
CarStop	126	2
Castanet	116	8
Celestas	9	0
Cello	43	0
Charang	85	0

Chiff	84	0
Choir	92	0
Choir Aahs	53	0
Choir Aah 2	53	32
Church Bells	15	8
Church Organ	20	0
Church Organ 2	20	8
Church Organ 3	20	16
Clarinet	72	0
Classic EP	5	0
Classic EP 2	5	8
Classic EP 3	5	16
Classic Synth	82	0
Classic Synth 2	82	1
Classic Synth 3	82	90
Clavi	8	0
Clavi Bass	39	90
Concert Bass Drum	117	8
Concert Grand	1	0
Contrabass	44	0
Country Lead	29	90
Crystal	99	0
Cup Mute Trombone	60	92
Cup Mute Trumpet	60	91
Cutting Guitar	29	8
Cymbal & Bass Drum	117	90
Dist Rhythm	31	90
Dist w/Feedback	31	8
Distortion	31	0
Dog	124	1
Door	125	3
DoorCreaking	125	2
Drawbar	17	0
Drawbar 2	17	32
Drawbar 3	17	8
Dulcimer	16	0
Dynamic Overdrive	30	90
Echo Bell	103	1
Echo Pan	103	2
Echoes	103	0
El Bass & Ride	34	92
Electric Bass	34	91
Electric Drum	119	9
Electric Grand	3	0
Electric Grand 2	3	8
Electric Guitar	28	0
Electric Guitar 2	28	8
Electric Guitar 3	29	16
Electronic Organ	17	98
Electronic Organ 2	17	99
English Horn	70	0
EP Legend	6	90
EP Phase	6	91
Euro Hit	56	91
Explosion	128	3
Fiddle	111	0
Fifth	87	0
Finger Bass	34	0
Finger Slap Bass	34	90

Flugel Horn	57	91
Flute	74	0
Flute Key Click	122	1
FootStep	127	5
French Accordion	22	0
French Accordion 2	22	90
French Horns	61	0
Fretless Bass	36	0
Full Organ	18	93
Full Pipes	20	98
Glockenspiel	10	0
Goblin	102	0
Gtr Cutting Noise	121	1
Guitar Feedback	32	8
Guitar Harmonics	32	0
Guitare Fret Noise	121	0
Gunshot	128	0
Halo	95	0
Hammer Bass	39	91
Handbells	15	90
Harmonica	23	0
Harp	47	0
Harp 2	47	90
Harpsichord	7	0
Harpsichord 2	7	24
Harpsichord Octave	7	8
Hawaiian Guitar	27	90
HeartBeat	127	4
Helicopter	126	0
Hi-Lo	17	92
Hollow	18	95
Honky Tonk	4	0
Horse Gallop	124	2
Humming	54	90
Itopia	92	90
Jazz Clarinet	72	90
Jazz Flute	74	90
Jazz Guitar	27	0
Jazzier	18	90
JetPlane	126	7
Jump Brass	63	90
Kalimba	109	0
Key Click	122	90
Koto	108	0
LaserGun	128	2
Laughing	127	1
Lead	82	8
MachineGun	128	1
Mandolin	26	16
Marimba	13	0
Mellow	17	94
Mellow Grand	1	16
Melodic Toms	118	0
Melodic Tom 2	118	8
Metallic	94	0
Mixer	18	94
Modern EP	6	0
Modern EP 2	6	8
Modern EP 3	6	16

Modern Piano	2	0
Mono Grand	1	92
Mono Strings	49	93
Music Box	11	0
Muted Electric	29	0
Muted Trumpet	60	0
Muted Trumpet 2	60	90
Newage	89	0
Nylon Acoustic	25	0
Nylon Acoustic 2	25	16
Nylon Acoustic 3	25	32
Oboe	69	0
Ocarina	80	0
Odd Man	17	95
Orchestra Hit	56	0
Orchestral Winds	74	92
Overdrive	30	0
Pan Flute	76	0
Pedal Steel	27	8
Percussive Organ	18	0
Percussive Organ 2	18	8
Percussive Organ 3	18	32
Piano Octaves	1	90
Piano Octaves 2	1	91
Piccolo	73	0
Pick Bass	35	0
Pick/Strum Gtr.1	28	91
Pick/Strum Gtr.2	28	92
Picking Ac.Gtr.1	25	91
Picking Ac.Gtr.2	26	92
Picking Banjo	106	91
Picking El.Gtr.	27	92
Pizzicato	46	0
Polysynth	91	0
Puff Organ	21	90
Punch	127	3
Rain	97	0
Rain 2	123	1
Recorder	75	0
Reed Organ	21	0
Reeds	20	99
Reverse Cymbal	120	0
Rhythm Box Tom	119	8
Rhythm Guitar	28	90
Rock Grand	2	8
Rock Organ	19	0
Rolling Marimba	13	90
Rolling Steel Drums	115	90
Rolling Timpany	48	90
Rolling Vibes	12	90
Rubber Bass	40	16
Sax Section	62	90
Sci-Fi	104	0
Scratch	125	4
Screamin'	17	93
Screaming	127	2
Seashore	123	0
Sequenced Analog	82	91
Shakuhachi	78	0
Shamisen	107	0
Shanai	112	0
Sine	81	8
Sine Pad	90	90
Siren	126	5
Sitar	105	0

Sitar2	105	1
Slap Bass	37	0
Slap Bass 2	38	0
Slow Violin	41	8
Small Ensemble	20	97
Soft Wire Lead	88	90
Soft Alto Sax	66	90
Soft Solo	17	97
Soft Tenor Sax	67	90
Solo Trumpet	57	90
Soprano Sax	65	0
Soundtrack	98	0
Square	81	0
Square 2	81	1
Starship	126	8
Steel Drums	115	0
Steel String	26	0
Steel String 2	26	90
Stream	123	4
String Ensemble	49	0
String Ensemble 2	50	0
String Quartet	49	92
Strings and Brass	49	8
Strumming Ac. Gtr. 1	27	91
Strumming Ac. Gtr. 2	25	90
Strumming Banjo	106	90
Strumming El.Gtr	26	91
Strumming Mandolin	26	93
Studio Grand	1	8
Sweep	96	0
Synth Bass	39	0
Synth Bass 2	40	0
Synth Bass 3	39	8
Synth Bass 4	40	8
Synth Brass	63	0
Synth Brass 2	64	0
Synth Brass 3	63	8
Synth Brass 4	64	8
Synth Clavi	8	90
Synth Drum	119	0
Synth Mallet	99	1
Synth Strings	51	0
Synth Strings 2	52	0
Synth Strings 3	51	8
Synth Vocal	55	0
Taiko Drums	117	0
Taisho Koto	108	8
Tango Accordion	24	0
Telephons	125	0
Telephon 2	125	1
Tenor Sax	67	0
Theater Organ	20	90
Theater Organ 2	20	91
Theater Organ 3	20	92
Theater Organ 4	20	93
Thunder	123	2
Tinkle Bell	113	0
Timpany	48	0
Train	126	6
Tremolo EP	5	90
Tremolo Strings	45	0
Trombone	58	0
Trombone 2	58	1
Trumpet	57	0
Tuba	59	0

Tubular Bells	15	0
Ukulele	25	8
Vibraphone	12	0
Viola	42	0
Violin	41	0
Voice	86	0
Voice Oohs	54	0
Wah Harmonica	23	90
Warm French Horn	61	1
Warm Pad	90	0
Warm Strings	49	91
Warm Synth Bass	39	1
Whistle	79	0
Wide Harpsichord	7	16
Wide Honky Tonk	4	8
Wide Marimba	13	8
Wide Vibraphone	12	8
Wind	123	3
WindChime	125	5
Wire Lead	85	90
Woodblock	116	0
Xylophone	14	0
Schlagzeug	PRG	
Standard Kit 1	1	
Standard Kit 2	2	
Room Kit	9	
Power Kit	17	
Electric Kit	25	
808 Kit	26	
Dance Kit	27	
Jazz Kit	33	
Brush Kit	41	
Orchestra Kit	49	
SFX Kit	57	

Diese Angaben benötigen Sie nur für den EVENT EDIT oder wenn Sie mit einem externen Sequenzer (z.B. Computerprogramm) auf das CP150 zugreifen möchten.

Die Bankumschaltung erfolgt mit den Control Befehlen 0 (MSB) und 32 (LSB).

Bitte in folgender Reihenfolge eingeben:

Beat	Bar	Clock	Event	Velo	Len.
1	1	0	Control	0	BNK
1	1	1	Control	32	0
1	1	2	Program		PRG

Wobei BNK für die Banknummer steht und PRG für die eigentliche Klangnummer.

Klänge mit der Banknummer 0 können ohne die beiden Control Befehle, also nur mit Program, eingegeben werden.

Schlagzeug Programmwechsel können nur auf der Spur 10 eingegeben werden.

Bei Rückfragen können Sie uns unter 02151-373100 gerne anrufen!